




# RAVAK®

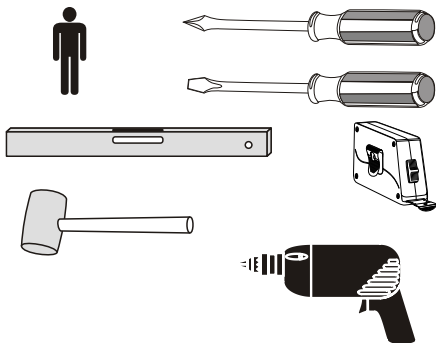

- CZ** ZRCADLO, SPODNÍ SKŘÍNKA K UMYVADLU *NÁVOD NA MONTÁŽ*  
**DE** SPIEGEL, WASCHTISCHUNTERSCHRANK *MONTAGEANLEITUNG*  
**GB** MIRROR, WASHBASIN CABINET *INSTALLATION INSTRUCTION*  
**HU** TÜKÖR, MOSDÓ SZEKRÉNY *ÖSSZESZERELÉSI ÚTMUTATÓ*  
**PL** LUSTRO, SZAFKA PODUMYWALKOWA *INSTRUKCJA MONTAŻU*  
**RU** ЗЕРКАЛО, ШКАФЧИК ПОД УМЫВАЛЬНИК *ИНСТРУКЦИЯ МОНТАЖА*  
**SK** ZRKADLO, SPODNÁ SKRINKA PRE UMYVADLU *NÁVOD PRE MONTÁŽ*  
**UA** ДЗЕРКАЛО, ШАФКА ПІД УМИВАЛЬНИК *ІНСТРУКЦІЯ З МОНТАЖУ*

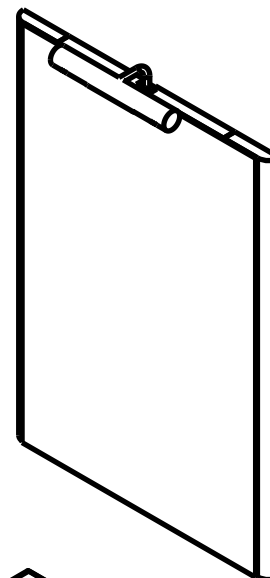


X000000240

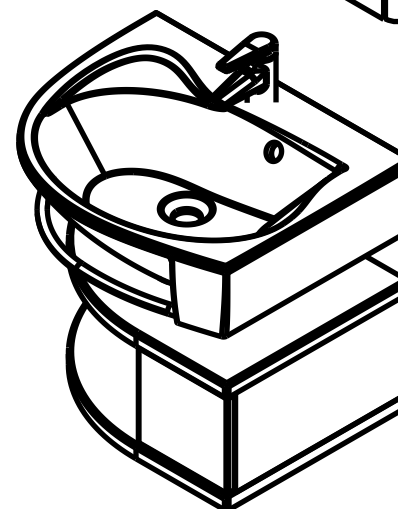



X000000238 - L  
X000000239 - R


# 2

CZ/SK let záruky  
DE jahre garantie  
GB years of guarantee  
HU év garancia  
PL lata gwarancji  
RUS лет гарантии  
UA рокив гарантії

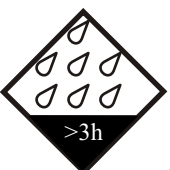

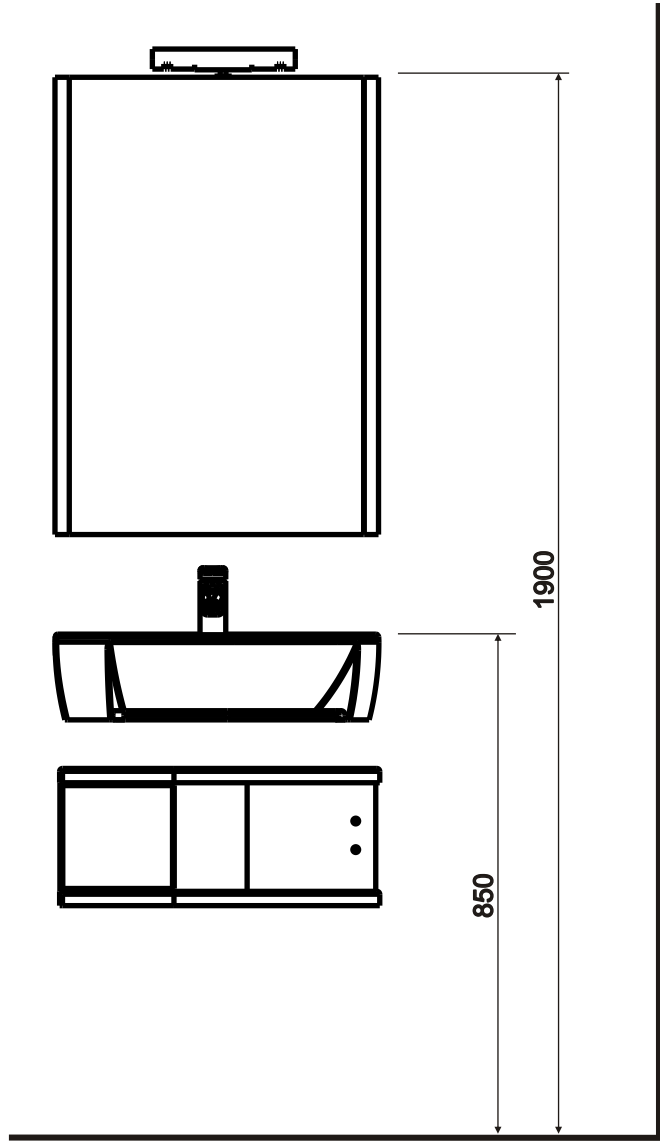

P10   
3x13 x2



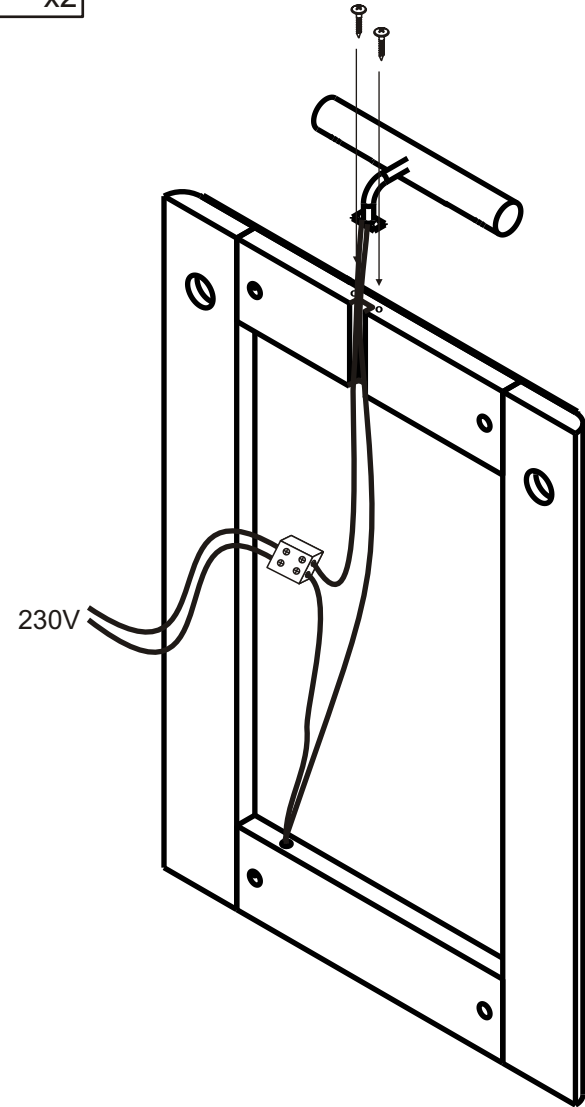


T10 X4

+ PZ2

Ø8

T12 X4

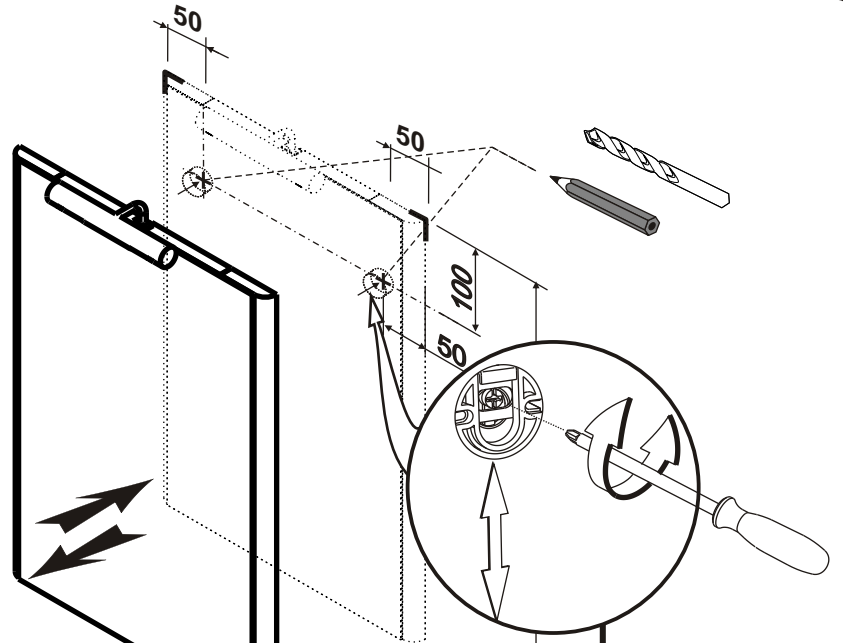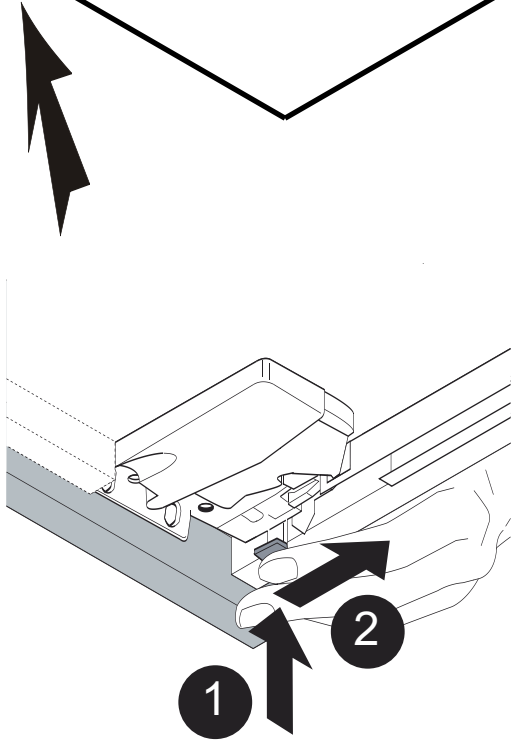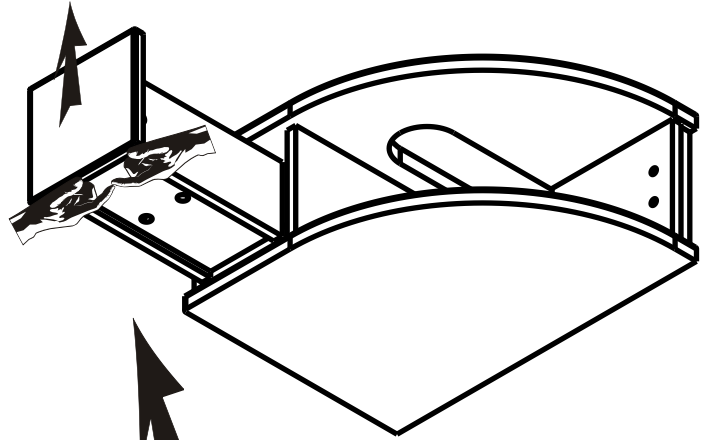

T12

